

# プラテン上のメディアの搬送について

プラテンにメディアが貼り付いてしまったり浮いたりしてしまう場合は、テープをプラテンに貼ることで改善することができます。以下をご用意ください。

NITOFLON® No.973UL-S(付属品)	マスキングテープ (厚さ 0.1mm 以下)		
水で薄めた中性洗剤	柔らかい布	手袋	ハサミ




(1) 本機の電源を切る。

(2) アンダーカバーを開けて、メンテナンスカバーを下げる。



・メンテナンスカバーがないモデルもあります。

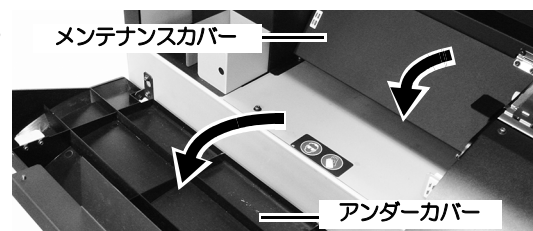


(3) つまみネジを外して、メディア押さえストッパを外す。

(4) メディア押さえ (2つ) をスライドさせて外す。




・メディア押さえストッパーがないモデルもあります。

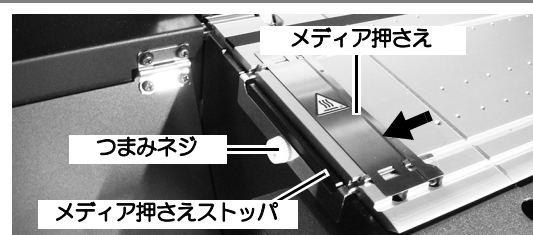

(5) 柔らかい布に薄めた中性洗剤を含ませて固く絞ってからプラテンの汚れを拭き取る。





・本機の内部に液体が入らないようにしてください。本機の故障、感電、または火災のおそれがあります。

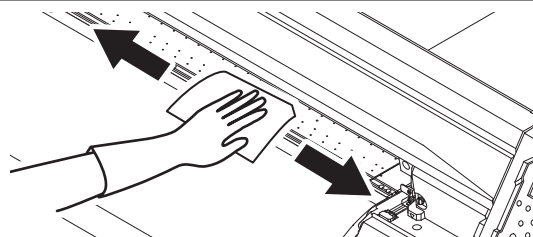

(6) プラテンが乾いてから、プラテンの右端から左端まで吸着穴に沿って、NITOFLON® を貼る。

**重要!**


- ・吸着穴をふさがないように貼ってください。
- ・NITOFLON® が剥がれたり、汚れたりしたときは交換してください。

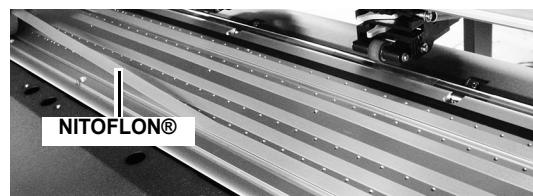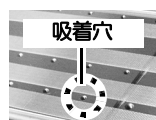

(7) メディアが通過しないプラテンのすべての吸着穴にマスキングテープを貼る。

**重要!**

- ・メディアを交換した場合など、メディアの幅が変わったときには、再度メディアが通過しないプラテンの吸着穴にマスキングテープを貼ってください。

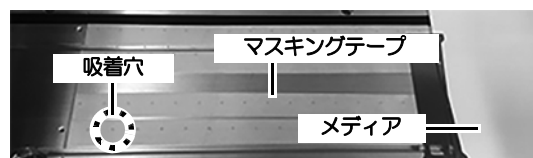

(8) メディア押さえ、メディア押さえストッパを元に戻す。

(9) アンダーカバー、メンテナンスカバーを元に戻す。

# Feeding media on the platen

If the media sticks or floats on the platen, you can improve it by applying tape to the platen. Please prepare the following.

NITOFLO® No.973UL-S (Accessory)	Masking tape (0.1 mm or less in thickness)		
Neutral detergent diluted with water	Soft cloth	Gloves	Scissors




(1) Turn the power off.

(2) Open the under cover, and pull the maintenance cover down.



- Some models do not have an maintenance cover.

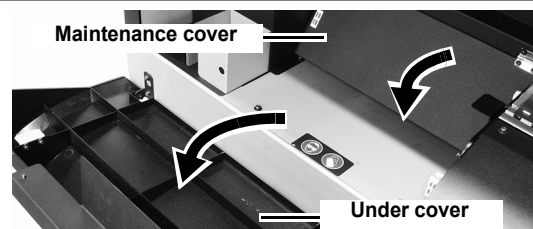


(3) Remove the thumbscrew, then remove the media holders.

(4) Slide and remove the media press (two pieces).




- Some models do not have media presses.

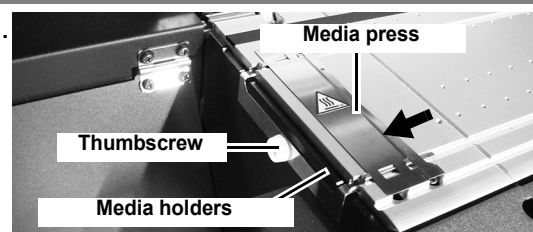

(5) Tightly wring out a soft cloth with diluted neutral detergent and then wipe the platen clean.





- Do not allow any liquids to get inside the machine. Allowing liquids to leak into the machine may lead to failure, electric shock, or fire.

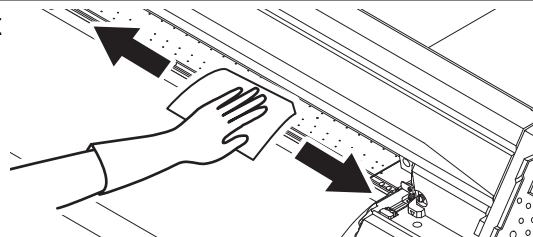

(6) After the platen dries, apply NITOFLO® along the suction holes from the right edge of the platen to the left edge.

**Important!**


- Take care that the suction holes are not blocked by the NITOFLO® strips.
- Replace the NITOFLO® if it is peeled or becomes contaminated.

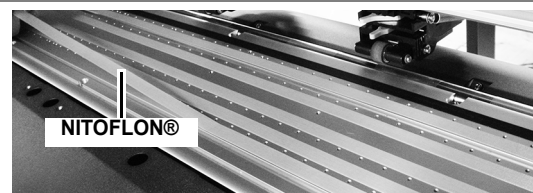

(7) Apply masking tape to all suction holes in the platen that the media will not pass through.

**Important!**

- If the media width changes, such as after replacing the media, apply masking tape to the suction holes in the platen where the media will not pass through again.

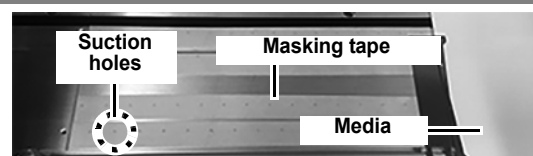

(8) Put the media presses and the media holders back in their original places.

(9) Put the under cover and maintenance cover back in their original places.